

## FCC Statement

Your radio might cause TV or radio interference even when it is operating properly. To determine whether your radio is causing the interference, turn it off. If the interference goes away, your radio is causing it. Try to eliminate the interference by:

- Moving your radio away from the receiver
- Contacting your local RadioShack store for help

If you cannot eliminate the interference, the FCC requires that you stop using the radio.

## Caring for Your Radio

Handle it gently. Keep it away from dust, moisture, and temperature extremes. Clean it with a damp cloth. Do not use harsh chemicals. Do not take it apart. If something is wrong with the radio, take it to your local RadioShack store for assistance.

## Listening Safely

To protect your hearing when using earphones, set the volume to the lowest setting before you begin listening, then adjust it to a comfortable level. Wearing earphones while driving a car or riding a bicycle can create a traffic hazard and could be illegal in some areas.

### Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations  
200 Taylor Street, 6th Floor, Fort Worth, TX 76102  
*We Service What We Sell*

04/99

08A99

Printed in the Philippines

OPTIMUS®

# AM•FM Pocket Radio

■ Built-In Speaker

■ Earphone Jack

Stereo Mate®

Owner's Manual

Cat. No. 12-610 **A**

## INSTALLING BATTERIES

### Two AAA Batteries

1

2

#### Cautions:

- Match the polarity symbols (+ and -) marked inside the battery compartment.
- Always use fresh batteries of the required size and type.

## USING THE RADIO

**PHONES** — plug in  $\frac{1}{8}$ -inch stereo earphones for private listening or the supplied FM antenna to enhance the FM reception through the built-in speaker.

**Note:** Connecting earphones disconnects the radio's built-in speaker.

**VOL** — turn to adjust the volume.

**ON/OFF** — slide to turn the radio on and off.

**TUN** — rotate to select your favorite station.

**FM ST/FM/AM** — slide to select the band.

**Note:** If you set **FM ST/FM/AM** to **FM ST**, the FM ST-REO indicator lights when the radio receives an FM stereo station. If FM stereo reception is weak, set **FMST/FM/AM** to **FM**.

**Note:** The radio's AM antenna is built-in. For the best AM reception, adjust the radio's position.

© 1998, 1999 Tandy Corporation.  
All Rights Reserved.

Optimus, RadioShack and Stereo Mate are registered trademarks used by Tandy Corporation.